

A SIMPLE GUIDE TO AUTOMATIC WAREWASHING

WHAT TO CHECK

HOW TO CHECK

WHERE TO LOOK

1 Is there sufficient chemicals in the containers?

Replace with new drums if the chemical level is low.



2 Check detergent and rinse additive tubing.

Is the right tube in the right container? **RED-Detergent** (ADAMAX bottle) **BLUE-Rinse**. (RINSE+ bottle)



3 Check that the dishwasher is switched ON at the mains.

Ensure that the power switch is turned to ON.



4 Check the dosing unit is switched ON.

The LCD should display 'R.P. Adam Ltd' if it is working properly.



WHAT TO CHECK

HOW TO CHECK

WHERE TO LOOK

5 Check the water softener if fitted.

A. Check that the timeclock is correct
B. Is the salt topped up?



6 Are the dishwasher operating temps set at the right levels?

DO NOT START OPERATING THE DISHWASHER UNTIL CORRECT TEMPERATURES ARE ACHIEVED.



7 Check the dosing unit is operating.

Do both pumps turn during the wash cycle?



8 Is the dishwasher operating correctly?

A. Are wash arms turning around?
B. Are filters clean and free of debris?
C. Does machine go through full cycle?



WAREWASHING TOP TIPS



Scrape all food debris from plates. Ensure all heavily soiled items are pre-rinsed prior to machine washing. Empty glasses of solid debris (cocktail sticks, fruit peel, pips, paper etc.)



Rack items of the same size together so none are hidden from wash jets. Fill rack evenly NOT too tightly. Do not MIX sizes and make sure they are spaced apart.



Ensure the baskets are filled to capacity to minimise breakages. Place cups and glasses upside down.



Mix cutlery in baskets to avoid items sticking together. Stack cutlery in baskets, handles down.

arpal
GROUP

WHERE SERVICE MATTERS MOST

RP Adam Ltd (Arpal Group),
North Riverside Business Park, Riverside Road,
Selkirk, TD7 5DU United Kingdom
☎ Customer Services: 01750 23780
☎ Engineering Services: 01750 23798
Email: salesinfo@rpadam.co.uk
Website: www.rpadam.co.uk

Technical Question: technical.solutions@rpadam.co.uk



PERSONAL PROTECTIVE EQUIPMENT

Please ensure that all persons following these instructions use the correct (P.P.E.)

DISHWASHER CLEANING OPERATION

- 1 Shut off machine at the mains supply and not just on the machine.
- 2 Open the drain plugs to empty the machine completely.
- 3 Remove the curtains and clean with a degreaser or sanitiser.
- 4 Remove both wash and rinse arms and clean out all debris.
- 5 Remove scrap trays and clean out all debris.
- 6 Thoroughly clean out the inside of the machine with a degreaser/sanitiser. RINSE THOROUGHLY.
- 7 Replace scrap trays, wash and rinse arms and curtains.
- 8 Shut doors and switch on and allow machine to heat up to correct working temperature.
- 9 Machine ready to operate.

- All pots and pans should be washed by hand.
- Allow crockery to air dry - never use a tea towel.
- Always stand glasses on drip mats to dry.
- Dump wash water after each session and refill with fresh water.
- Check and clean filter trays after each session.
- Frequently check that wash and rinse jets are free of debris and scale.
- Descale the machine (if required) regularly with Adamatic Descaler.

RP Adam products are manufactured under ISO 9001 & ISO 14001 registered Quality and Environmental Management System.